

## OPERATING HINTS

The machine must NOT be used as a slitter or aerator as the blades will damage the lawn, and the machine will be damaged.

Always use the machine at maximum engine speed.

Empty the grassbag frequently.

If the Scarifier should strike a stone or similar object, STOP the engine immediately and wait for the blades to stop rotating. Inspect the Scarifier for damage and if in any doubt contact your supplier.

## TO STOP THE ENGINE


Release the operating lever.

Switch the ignition to 'OFF' position.

Turn the fuel tap to 'OFF' position.

Wait for the blades to stop rotating before attempting to move the machine.

**WARNING: THE EXHAUST COVER MAY BE HOT - DO NOT TOUCH.**

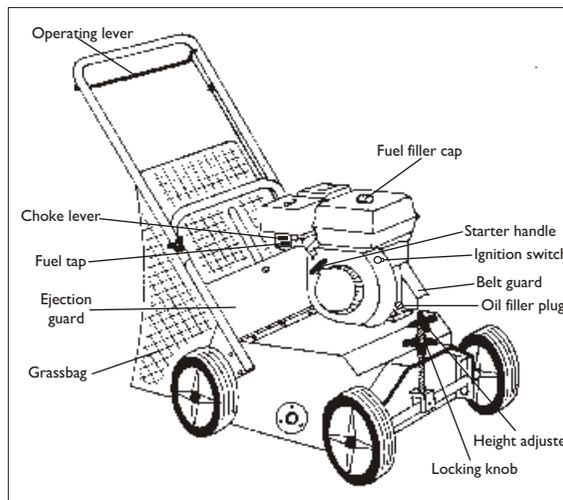

Noise emissions - 86.9dB(A) (pressure)  
- 103.5dB(A) (pressure)  
- 98.9dB(A) (pressure)

Ear defenders to be worn to BS EN352-1: 1993

Vibrations transmitted - 6.25m/sec sq

# CAMON

## LAWN SCARIFIER

### OPERATING INSTRUCTIONS & SAFETY NOTES

## IMPORTANT PLEASE READ CAREFULLY

No liability will be accepted for any damage caused to persons or property through failure to observe the operating and safety instructions.



Teknol House, Victoria Road, Burgess Hill, West Sussex RH15 9LH  
Tel: 01444 247689 Fax: 01444 871612  
Website: [www.tracmaster.co.uk](http://www.tracmaster.co.uk) E-mail: [info@tracmaster.co.uk](mailto:info@tracmaster.co.uk)

LS17/0704

# S A F E T Y

**ALWAYS** start the engine in the open air

**DO NOT** smoke when refuelling

**DO NOT** mix OIL with the petrol

**USE ONLY** unleaded petrol

**ALWAYS** stop the engine before making any adjustments, refuelling, moving or cleaning, or when the unit is unattended

**DO NOT** remove any safety guards that are fitted

**DO NOT** touch any moving parts or attempt any maintenance whilst the machine is running - **KEEP HANDS AND FEET AWAY**

**BEFORE** starting work clear the work area of any objects that could damage the machine

**DO NOT** allow children or anyone uninstructed to operate the machine - **KEEP ANIMALS AWAY**

**DO NOT** use on slopes or banks of more than 25°

**ALWAYS** wear suitable clothing to give personal protection including footwear that offers a good grip

**AVOID** wearing loose garments that may catch in moving parts

**KNOW** how to stop the machine in an emergency

**NEVER** interfere with any control settings on the engine

**IF A FAULT** develops **DO NOT** attempt any repair - immediately contact the supplier from whom the machine was obtained

# STARTING THE ENGINE

Check the engine oil level - top up with 10w/40 oil if necessary.

Check fuel level.

Only use unleaded petrol from a clean container.

Never re-fuel when the engine is hot or running.

Allow 1" air space in the tank.

Switch ignition to 'ON' position.

If the engine is cold, move the choke lever to 'ON' position.

Turn the fuel tap to 'ON' position.

Hold the handlebar, place foot against rear wheel.

Pull the recoil start handle gently until it is engaged, then give the handle a strong pull to start the engine.

When the engine has started, move the choke lever to 'OFF' position.

# OPERATING HINTS

Before starting work clear the lawn of any objects such as stones or sticks, that would damage the Scarifier or be thrown out at dangerously high speeds by the rotating blades.

Set the operating height adjuster by screwing the top adjuster knob up or down so that the blades comb the grass without touching the soil, then tighten the locking knob.

**THE BLADES MUST NOT BE ALLOWED TO TOUCH THE GROUND.**

Mount the grassbag onto the Scarifier by raising the ejection guard and sliding the grassbag frame lugs into the locating slots each side of the axle frame.

Always stop the engine and wait for the rotating blades to stop before removing and replacing the grassbag.

The **CAMON** Lawn Scarifier is designed to allow light, air and water to the roots of grass to keep it healthy. It does this by removing thatch which is made up of organic debris such as cut grass, leaves and dead moss that has not decomposed.